

# Data Collection



## iClock 990 Biometric Time & Attendance, Data Collection Terminal



### User Manual

Version 1.1

Date: November 2011



## Viper Biometric Device

# Table of contents

<b>1</b>	<b>Getting started</b>	<b>3</b>
1.1	Fingerprint Placement . . . . .	.3
1.2	Instruction for Card Swipe . . . . .	.3
1.3	Precautions . . . . .	.3
<b>2</b>	<b>Introduction of device</b>	<b>4</b>
2.1	Overview of Device Functions . . . . .	.4
2.2	Important Safeguards . . . . .	.4
2.2.1	Installation Location . . . . .	.4
2.2.2	Use of Sensor . . . . .	.4
2.2.3	Product Appearance . . . . .	.4
2.3	Using the Fingerprint Terminal. . . . .	.4
2.4	Date & Time Adjustment. . . . .	.5
2.5	Enrol Administrator / User . . . . .	.6
2.6	Password Enrolment . . . . .	.7
2.7	RFID Card Enrolment . . . . .	.7
2.8	Enrolling a Photo ID & Verification. . . . .	.8
2.8.1	Fingerprint Verification with Photo . . . . .	.8
2.8.2	Password & Card verification (photo) . . . . .	.9
2.9	Manage Users . . . . .	10
2.9.1	Search Users . . . . .	10
2.9.1	Delete User. . . . .	10
<b>3</b>	<b>User Access</b>	<b>11</b>
3.1	Description of User Access . . . . .	11
3.2	Assign a User to Time Zone . . . . .	12
3.2.1	Create a Time Zone . . . . .	12
3.2.2	Assign a Holiday Time Zone . . . . .	13
3.2.3	Create or Edit Group settings . . . . .	13
3.2.4	Unlocking Combination settings . . . . .	14
3.2.5	Change Access Control Parameters . . . . .	14
3.2.6	Duress Alarm Parameters . . . . .	15
3.2.7	Define a Duress Finger . . . . .	16
3.2.8	Work Codes . . . . .	16
<b>4</b>	<b>Communications</b>	<b>18</b>
4.1	Network (TCP/IP) . . . . .	18
4.2	RS232/485 . . . . .	18
4.3	Security . . . . .	19

# Table of contents...continue 1


<b>4</b>	<b>Communications...continue</b>	<b>19</b>
	4.4 Wiegand . . . . .	19
	4.5 Web setup . . . . .	20
<b>5</b>	<b>System</b>	<b>21</b>
	5.1 System settings . . . . .	21
	5.2 Data Management . . . . .	21
	5.2.1 System Update . . . . .	22
	5.3 Keyboard . . . . .	22
	5.4 Display . . . . .	22
	5.5 System Reset. . . . .	23
	5.6 Bell . . . . .	23
	5.7 Miscellaneous settings . . . . .	24
	5.8 Pendrive (USB) . . . . .	24
	5.9 Auto Test . . . . .	24
	5.10 Record . . . . .	25
	5.11 System Information . . . . .	25

# 1. Getting started

## 1.1 Fingerprint Placement

Recommended fingers: The index finger, middle finger or the ring finger; the thumb and little finger are not recommended (because they are usually clumsy on the fingerprint collection screen).


### 1. Proper finger placement:

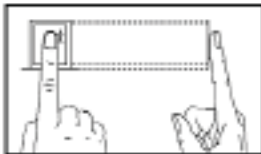


The finger is flat to the surface  
and centered in fingered guide.

### 2. Improper finger placement:


#### Not flat to the surface

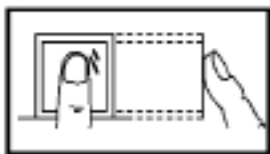


#### Off-center

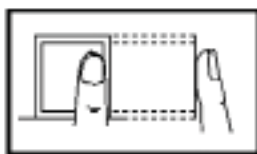

#### Slanting

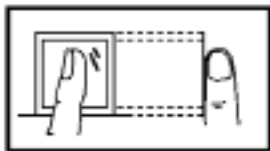

#### Off-center

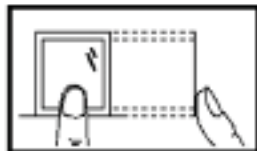

Please enrol and verify your fingerprint by using the proper finger placement mode. We shall not be held accountable for any consequences arising out of the degradation in verification performance due to improper user operations. We shall reserve the right of final interpretation and revision of this document.

## 1.2 Instruction for Card Swipe

This device is supplied with an integrated non-contact RFID (125 MHz) card reader module. By offering multiple verification modes such as fingerprint, RF card and fingerprint + RF card verification, this device can accommodate diversified user needs.

Swipe your card across the sensor area after the voice prompt and remove your card after the device has sensed it. For the swipe area, please see 2.2.3 Product Appearance.

## 1.3 Precautions

Protect the device from exposure to direct sunlight or bright light, this greatly affects the fingerprint collection and leads to fingerprint verification failure.

It is recommended to use the device under a temperature of 0–50°C so as to achieve the optimal performance. In the event of exposure of the device to the outdoors for long periods of time, it is recommended to adopt sunshade and heat dissipation facilities because excessively high or low temperature may slow down the device operation and result in high false rejection rate (FRR).

When installing the device, please connect the power cable after connecting other cables. If the device does not operate properly, be sure to shut down the power supply before performing necessary inspections. Note that any live-line working may cause damage to the device and the device damage arising out of live-line working falls beyond the scope of our normal warranty.

For matters that are not covered in this document, please refer to related materials including the installation guide, access control software user manual.

## Summary

\* Please ensure correct placement of finger on reader.

\* Ensure to disconnect all power cables, before attempting maintenance.

## 2. Introduction of Device

### 2.1 Overview of Device Functions

As an integrated fingerprint & access control device, our product can be connected with either an electronic lock or an access controller. This device features simple and flexible operations and supports the use of administrators. The screen displays will guide you through all the operations. It supports access control function for a security management and supports multiple communication modes.


### 2.2 Important Safeguards

#### 2.2.1 Installation Location

Do not install terminal in areas which are exposed to bright sunlight or rain, as the fingerprint readers are not designed to work in those areas. Bright light will interfere with reading of the sensor and fingerprint readers are not waterproof or vandal proof. It is recommended to protect your fingerprint terminal with enclosure.


#### 2.2.2 Use of Sensor

Do not abuse the fingerprint sensor by scratching the surface, contacting the sensor's surface with heat, pressing hard during placement of fingerprint for verification. Clean the sensor occasionally with cellophane tape to maintain the performance of the sensor.

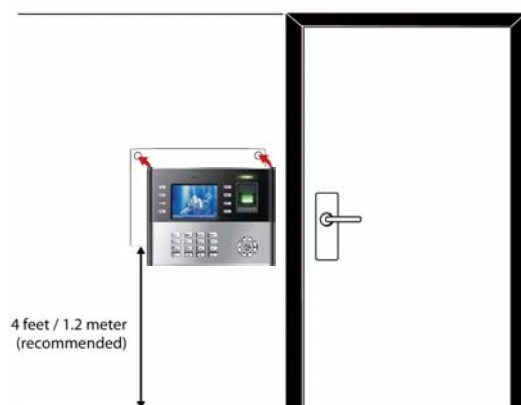

#### 2.2.3 Product Appearance

Front view:

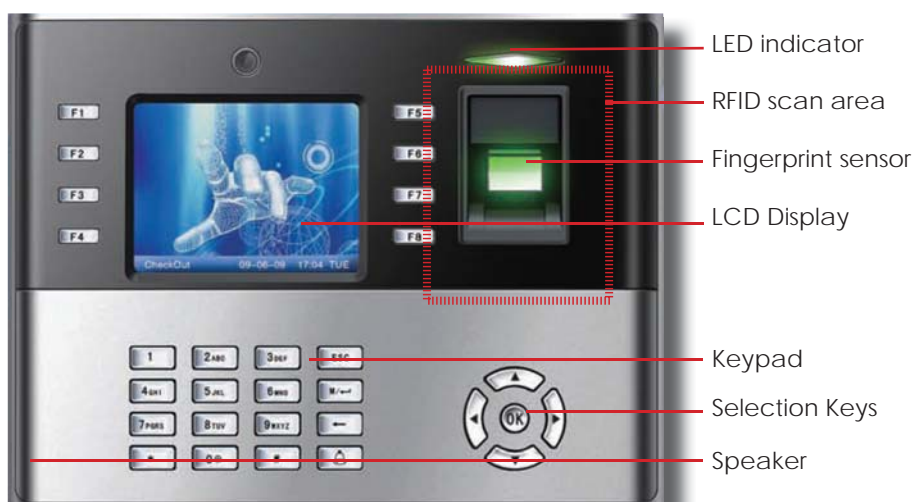

### 2.3 Using the Fingerprint Terminal

This chapter will guide on how to use the fingerprint terminal effectively. To get a good reading every time, initial fingerprint enrollment must be done properly.

## Summary

\* Multiple communication modes

\* Do not install in bright light or direct sunlight.

\* Recommended height is 1.2m from the floor

The fingerprint terminal provides 4 types of enrolment methods:

- **Fingerprint enrolment**

User enrolls his fingerprint template into a terminal and the template will be used for future verifications.

- **Password enrolment**

For user who has difficulty to enrol fingerprint due to poor fingerprint quality, enrolment of password is recommended. Password enrolment is also suitable for visitors and temporary workers.

- **Fingerprint and password enrolment**

Under this option, a user can enrol both fingerprint and password at the same time. The user can either use fingerprint or password to report attendance or to gain access.

- **RFID card enrolment**


Please refer to Chapter 2.7 for RFID Card Function.

## 2.4 Date / Time Adjustment

When first installing a fingerprint terminal, it is important to set the correct date and time.

Follow the steps shown to access the Date/Time adjustment menu:


- You can insert inputs into the terminals through the keypad. It contains numbers from 0-9, an OK button, an ESC/Cancel button, a Scroll up/down button, a doorbell button and a Menu button.

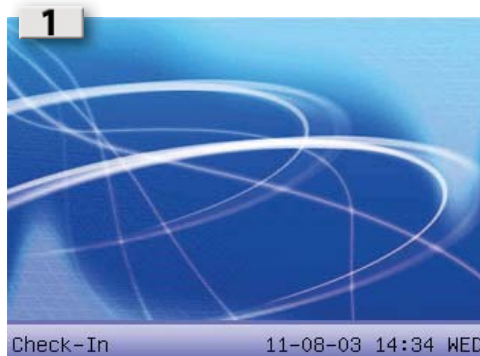


- Press **[M]** (menu) once



- Press **[▶]** 3 times to go to Date/Time
- Press **[OK]** once

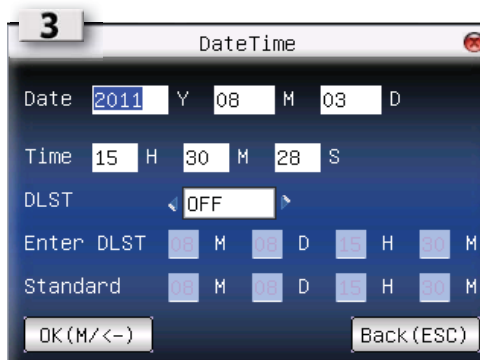

- Press **[▼]** to go to the desired field.
- Enter the value using keypads.

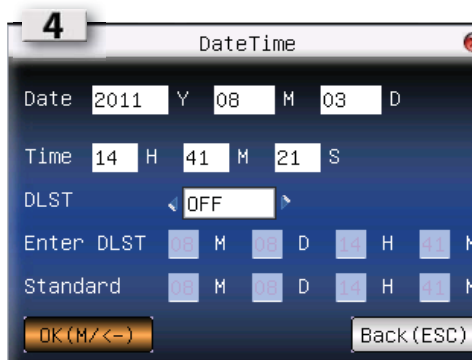

- Press **[OK]** once to confirm settings.

## Summary

\* Ensure the correct date & time on the unit.

\* Enter the correct date & time in the required fields

## 2.5 Enrol Administrator / User

Once the fingerprint terminal is switched on, a display on the screen will appear. Enrol a supervisor or an administrator, who is the in-charge person to administer the fingerprint templates and the transaction data in the terminal. Choose trustworthy people for this particular role.

## Summary

\* Ensure to enrol an administrator on the unit.


\* FP = Fingerprint

\* PWD = Password / pin

\* User = No administrative rights on the unit

\* Admin = Full control of unit

\* Ensure a good quality fingerprint

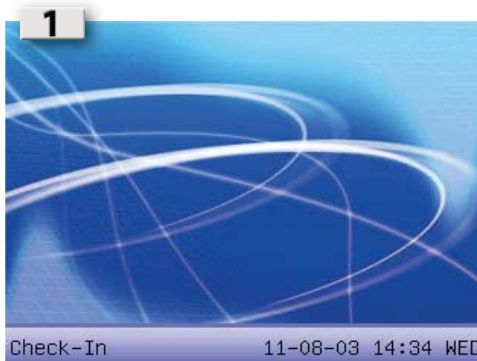


- Press **M/A** (menu) once




- Press **OK** (menu) once




- Press **OK** (menu) once

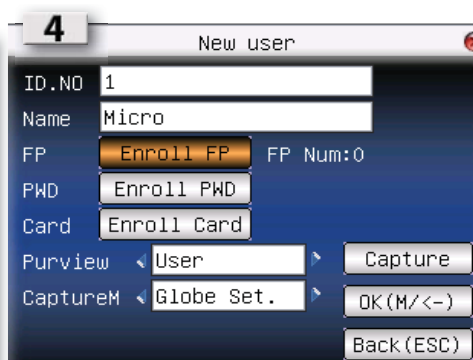

- Press **▼** 2 times to enrol fingerprint
- Press **OK**

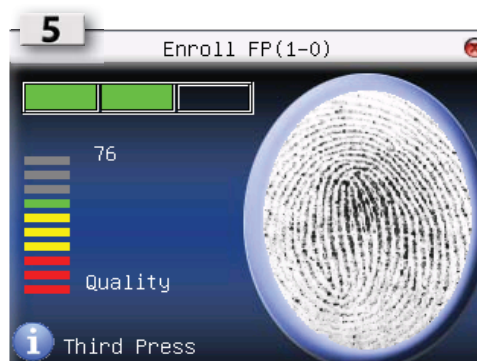

- Press desired finger 3x times on sensor to enrol

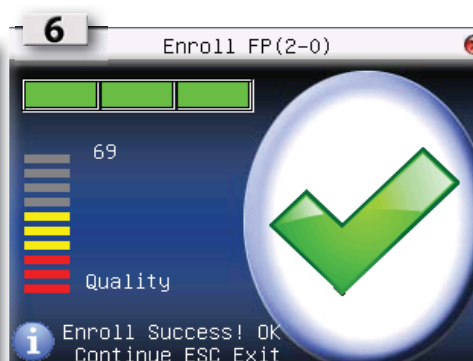

- Press **OK** once to enrol more
- Press **ESC** to exit

## 2.6 Password Enrolment

If a user cannot enrol his fingerprint, he can choose to use passwords. Follow the steps below:

**1** New user

ID.NO 1

Name Micro

FP Enroll FP FP Num:1

PWD Enroll PWD

Card Enroll Card

Purview User Capture

CaptureM Globe Set. OK(M/←) Back(ESC)

- Press ▼ 3x times to enrol password

**2** Enroll PWD

Input PWD (Max Length:8 digits)

\*\*\*\*\*

PWD Affirm (Max Length:8 digits)

\*\*\*\*\*

OK(M/←) Back(ESC)

- Type a numeric password in the fields
- Press OK to enter

## 2.7 RFID Card Enrolment

If a user cannot enrol his fingerprint, he can choose to use a RFID Card. Follow the steps below:

**3** New user

ID.NO 1

Name Micro

FP Enroll FP FP Num:1

PWD Enroll PWD

Card Enroll Card

Purview User Capture

CaptureM Globe Set. OK(M/←) Back(ESC)

- Press ▼ 4x times to enrol a RFID card

**4** Enroll Card

Punch Card!

- Punch the card to enrol

**5** Enroll Card

ID:0013695003

Read Successfully!  
Save [OK] Exit [ESC]

- Confirmation of enrolment
- Press OK to save OR
- Press ESC exit

## Summary

\* Password may contain numbers ranging from 1 - 8 digits.


\* RFID card is for added security on the unit, or if the user can't use a fingerprint

## 2.8 Enrolling a Photo ID & Verification


Each enrolled user can enrol a photo ID for confirmation of fingerprint enrolled user. With every confirmation of fingerprint the unit will display the enrolled ID photo.

### Summary

\* Photo will accompany user ID when verifying with access (FP or Card)

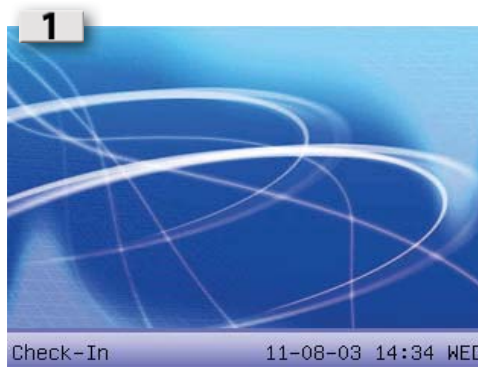


- Press **M/** (menu) once
- Press **OK** 2x times

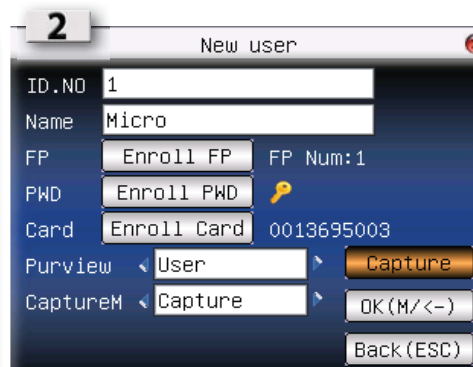

- Press **▼** 7x times to enrol a photo



- Press **OK** to capture photo
- Press **OK** after completing capture to exit
- Press CANCEL to re-take the photo

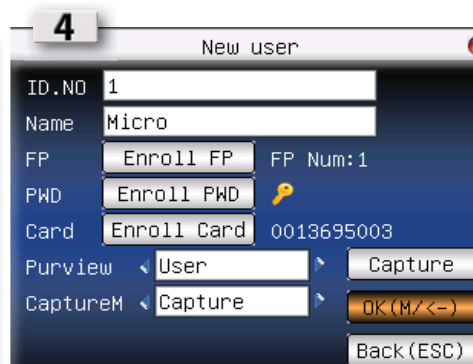

- Press **▼** once
- Press **OK** to save

### 2.8.1 Fingerprint Verification with Photo



- Press fingerprint on sensor to verify user



- Verification of fingerprint will display user id photo
- Voice prompt to follow : "Thank You"

## 2.8.2 Password & Card verification with photo

### Summary


\* Press number for user ID and then insert PWD for access.



- Press your user id number
- Press **OK**



- Enter your numeric password
- Press **OK**

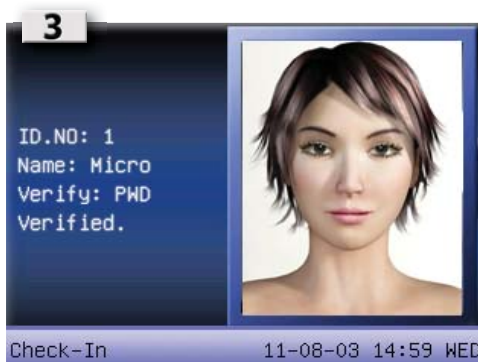

- Photo will verify the user id



- Swipe your RFID Card
- Photo will verify user id



- Incorrect entry via fingerprint / card or password will show error on screen
- Try again




- Successful entry will display clock and time


\* Clock display with successful verification

## 2.9 Manage Users


### 2.9.1 Search User

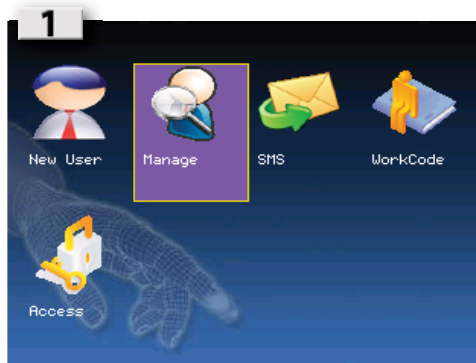

- Press **M/4** (menu) once
- Press **OK**
- Press **▶** once
- Press **OK**

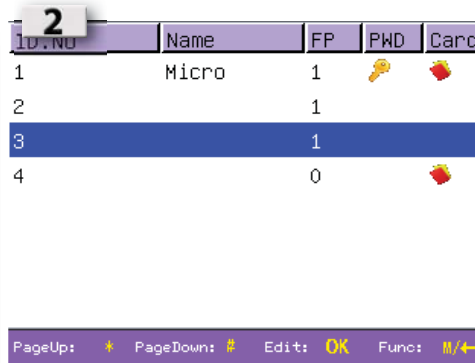

- Press **▼** to selected user

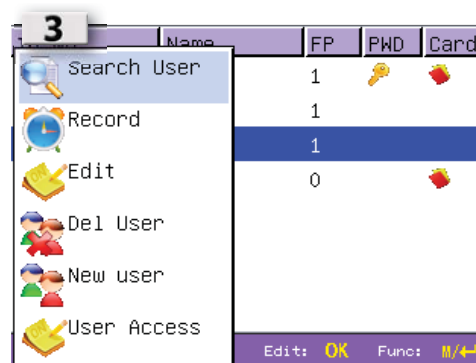


- Press **M/4** (menu) for options window
- Select SEARCH USER
- Press **OK**



- Type in the desired user id to search

### 2.9.2 Delete user

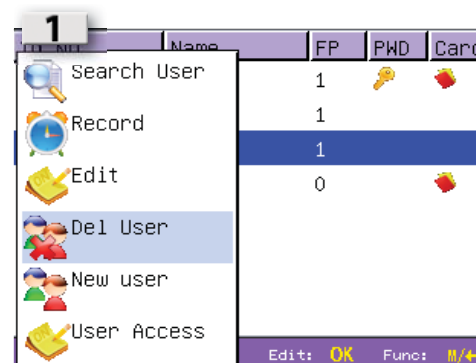

- Select DEL USER to enter delete options



- Delete a single user
- Move down to desired user
- Press **OK**

## Summary

\* Take note: Only Administrator can edit / delete users

\* Ensure to select correct user ID before deletion



- Press **▼** (menu) once to select available options to delete.



- Press **OK** to confirm

## 3. User Access

### 3.1 Description of User Access

Access option function setting is the settings of user's accessibility to certain doors. It is known as Time Zone. A combination of Time Zones is known as Group Time Zone. There are a total of 50 Time Zones available in the reader. Below are some examples of Time Zone configurations and combinations of Time Zones.

#### Time Zone 1

Constant access time for a period of one week. Table below is showing the time zone 1 detailed schedule where users are only allowed access from 9am to 6pm from Monday to Sunday.

Time Zone	1
SUN	09H00 : 18H00
MON	09H00 : 18H00
TUE	09H00 : 18H00
WED	09H00 : 18H00
THU	09H00 : 18H00
FRI	09H00 : 18H00
SAT	09H00 : 18H00

#### Time Zone 2 & 3

Variation in access for a period of one week. Table below is showing the Time Zone 2 where users are allowed to access from 8am to 12pm from Monday to Friday but denied any access on the weekends and Time Zone 3 where users are allowed to access from 2pm to 6pm from Monday to Friday but denied any access on the weekends. The Time Zone 2 and Time Zone 3 belongs to the same group of employees, therefore they can be grouped together in Group Time Zone, for example Group.

Time Zone	2	3
SUN	23H59 : 00H00	23H59 : 00H00
MON	08H00 : 12H00	14H00 : 18H00
TUE	08H00 : 12H00	14H00 : 18H00
WED	08H00 : 12H00	14H00 : 18H00
THU	08H00 : 12H00	14H00 : 18H00
FRI	08H00 : 12H00	14H00 : 18H00
SAT	23H59 : 00H00	23H59 : 00H00

## Summary

\* Time Zones can be created for access times to allow access

\* Access from 9H00 - 18H00

\* Everyday of the week

\* TZ 2 : Access from 8H00 to 12H00 during week

\* No weekend access

\* TZ 3 : Access from 14H00 to 18H00 during week

\* No weekend access

## Group Time Zones

There are a total of 5 Group Time Zones available for use. Every new registered user belongs to Time Zone 1. Default grouping combination is Group 1 and default Group Time Zone 1.

GROUP TIME ZONE	TIME ZONES		
1	2	3	
2			
3			
4			
5			


Under a condition where Group 1 and Time Zone 1 are in factory default status, new registered user defaults in unlocking status. If the grouping of that user does not include in grouping combination setting, then user can only record time attendance but cannot unlock the door.

## 3.2 Assign a user to a Time Zone

### 3.2.1 Create a Time Zone



- Press **M/** (menu) once
- Press **OK**
- Press **▼** to select ACCESSS
- Press **OK**

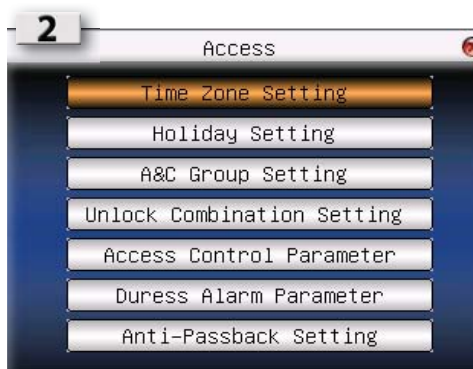

- Press **OK** once




- Press **▼** to selected field and enter values


## Summary

\* Ensure to setup a Time Zone first before assigning users

### 3.2.2 Assign a Holiday Time Zone

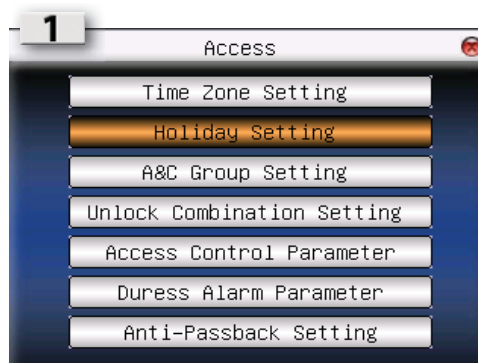


- Press **▼** to select HOLIDAY SETTINGS

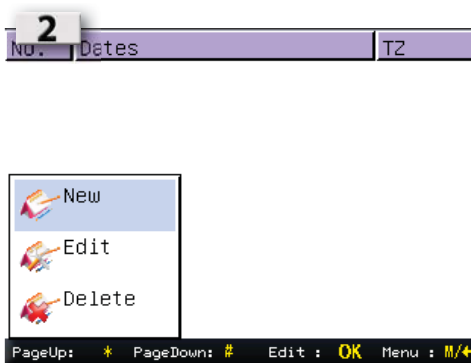

- Press **M/←** to open options window
- Press **OK** to create a new settings




- Insert values
- Press **OK** to save

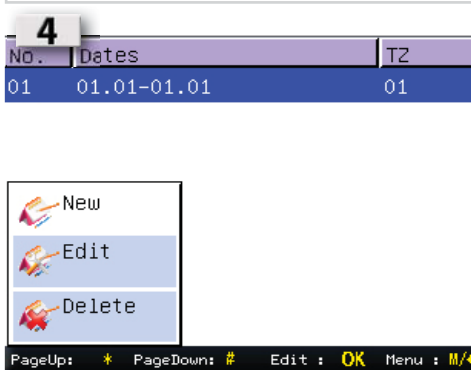


- EDIT / DELETE are available to change and delete

### 3.2.3 Create or Edit a Access Control Group setting

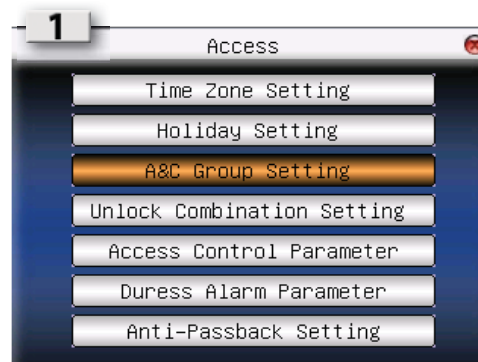

- Press **▼** to select A&C SETTINGS

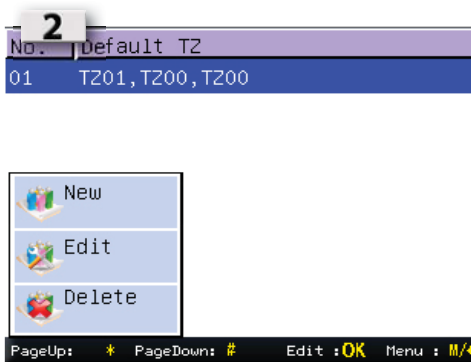

- Press **M/←** to open options window
- Note that Time Zone is already available
- NEW / EDIT / DELETE options are available

## Summary


\* Ensure to capture all holidays when setting up.

\* Recommended to create holiday time zones to deny access, rather than deny access per user for holidays


\* Delete is only available when a new group is created. There must always be a group active.

### 3.2.4 Unlocking Combination settings

Combo settings are for extra added security, where more than one user need to sign in before access is granted.

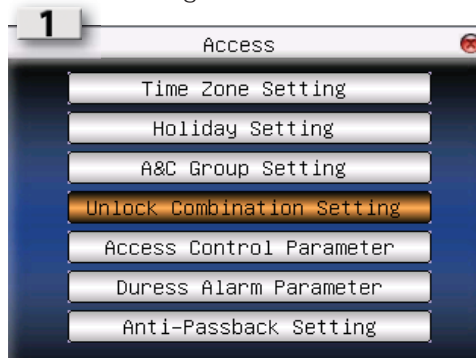

- Press **▼** to select UNLOCK COMB SETTINGS
- Press **OK**

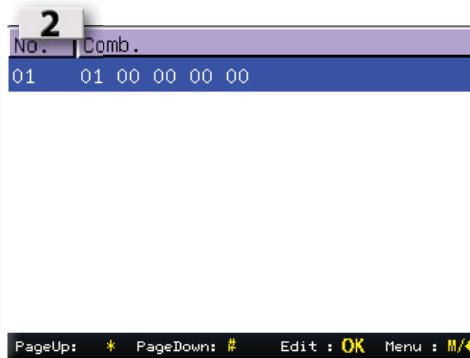


- Press **M/4** (menu) for NEW / EDIT / DELETE options

## Summary


\* Combo settings for added security

\* 2 or more user verification needed before access allowed


### 3.2.5 Change Access Control Parameters settings

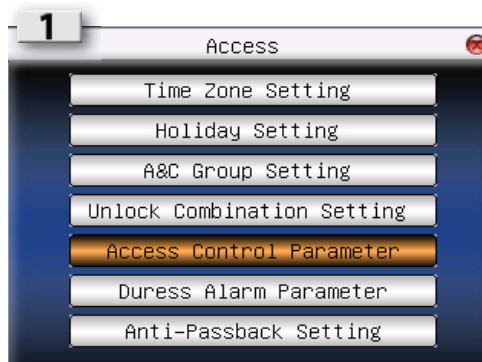

- Press **▼** to select ACCESS CONTROL SETTINGS
- Press **OK**

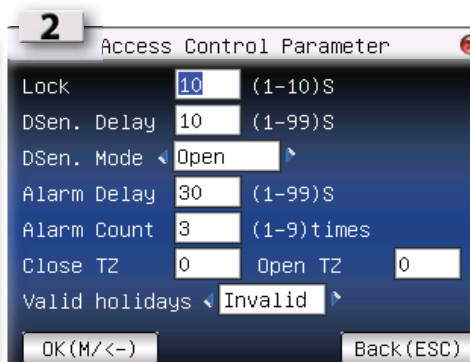

- Press **▼** to select field and change values

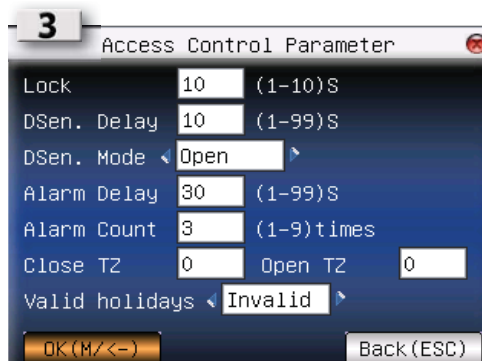

- Press **OK** to save.


- **Lock (1-10s):**  
To adjust the unlocking time after verification.
- **Dsen. Delay (1-99s):**  
To delay door sensor from triggering alarm system when door is not closing. This function only works when a door sensor is attached to the reader.
- **Dsen Mode:**  
To choose the type of door sensor attached to the reader. There are NO (normally opened) and NC (normally closed) available. Choose NONE if no door sensor is attached.
- **Alarm Delay (1-99s):**  
To delay the reader from triggering alarm system.
- **Alarm count (1-9 times):**  
To adjust the maximum verification failures of users. When the maximum is reached, reader will trigger alarm system.
- **Close TZ:**  
Door is always locked during the predefined time period, so users cannot gain access after verification.
- **Open TZ:**  
Door is always unlocked during the predefined time period, so users do not need to verify their identities but can gain access.
- **Valid holidays:**  
Choose Valid to enable the holiday settings. Choose Invalid to disable the holiday settings.

\* Parameter settings is to change the control of the unit


### 3.2.6 Duress Alarm Parameters

The fingerprint reader will trigger alarm system after a duress fingerprint is verified successfully. It is advisable :


- 1 to use different fingers to do daily clocking mechanism and to trigger duress alarm
- 2 to use different verification to do daily clocking mechanism and to trigger duress alarm.

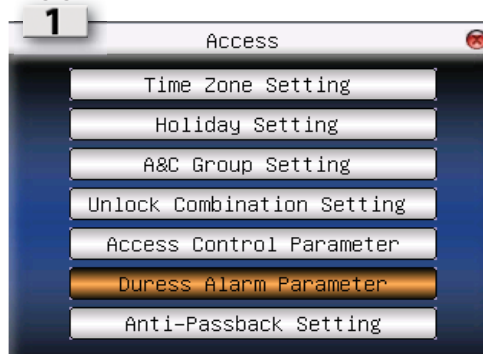

- Press to select DURESS ALARM SETTINGS
- Press **OK**

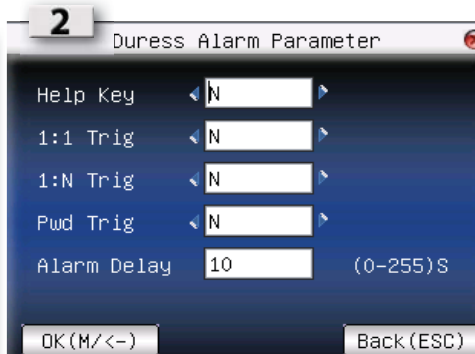

- Press to select value field
- Press to change options

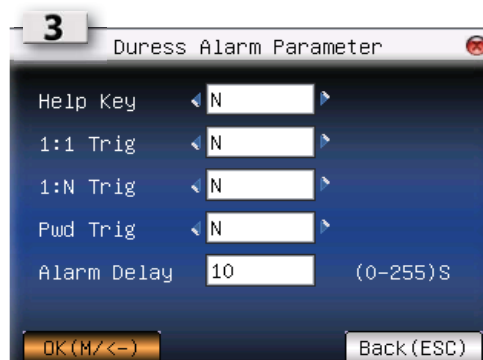

- Press **OK** to save



- Help key :  
Select [Yes] to enable. Hold the for 3 second followed by the fingerprint verification. Successful verification will trigger alarm system.
- 1:1 Trig :  
Select [Yes] to enable. Enter user ID followed by fingerprint verification to trigger alarm system. During daily clocking mechanism, all users use 1:N fingerprint verification. All 1: N fingerprint verification process will trigger alarm system.
- 1:N Trig :  
Select [Yes] to enable. Place finger on scanner for fingerprint verification to trigger alarm system. During daily clocking mechanism, all users use 1:1 fingerprint verification. All 1:N fingerprint verification process will trigger alarm system.
- Pwd Trig :  
Select [Yes] to enable. Enter user ID and password for verification to trigger alarm system. During daily clocking mechanism, all users use fingerprint verification. Any password verification process will trigger alarm system.
- Alarm delay :  
To delay the reader to trigger alarm system after verification.

### 3.2.7 Define a Duress Finger

If users would like to use different fingers for daily clocking and to trigger duress alarm, users must enrol with more than 1 fingerprint (2 or above).

- Example : index finger for daily clocking activities and thumb as duress finger.

When duress finger is used for verification, it will trigger alarm system as well. Administrator does not need to enable any of the verification methods in Duress Alarm Parameters.

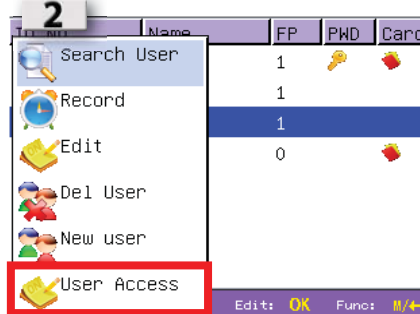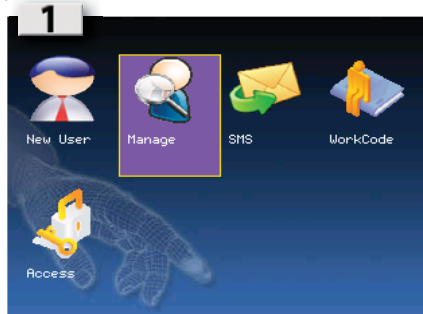

## Summary

\* Enrol 2x or more fingerprints to assign a fingerprint.

\* Assign index finger for daily clocking, and thumb for duress finger.

**3**

User Access

ID.NO 1 Group No. 1

VerType < FP/PW/RF >

Use T2 < Custom T2 >

T21 0

T22 0

T23 0

Duress FP Manage Sum :0

OK (M/←) Back (ESC)

- Press **OK** on USR MNG, **M/←** to MANAGE
- Select user id for change
- Press **M/←**, USER ACCESS
- Select MANAGE

**4**

Description

No.	Description
1-10	the 01 sum of FPS
<input checked="" type="checkbox"/> 1-09	the 02 sum of FPS

PageUp \* PageDown # Select **OK** Menu **M/←**

- Press **M/←** (menu) once
- Select ENROL FP
- Follow instructions
- ESC to exit

**5**

Description

No.	Description
<input checked="" type="checkbox"/> 1-10	the 01 sum of FPS

System

Do you want to save changes?

OK Cancel

PageUp \* PageDown # Select **OK** Menu **M/←**

- Press ESC
- Press **OK** to c

**6**

User Access

ID.NO 1 Group No. 1

VerType < FP/PW/RF >

Use T2 < Custom T2 >

T21 0

T22 0

T23 0

Duress FP Manage Sum :1

OK (M/←) Back (ESC)

- Press **OK** to exit

### 3.2.8 Work Codes


This terminal is providing work code feature. The work code feature allows user to key in predefined number after fingerprint or password verification. User will key in related work codes to show purpose of their clocking data. Table below is showing examples of work code function predefined by number:

REASON	WORK CODE
Engineer	100
Welder	200
Packer	300
Receiving	400
Dispatch	500


\* Workcodes can be customised.

\* Advisable to use software to adjust workcodes


## Create and assign work codes

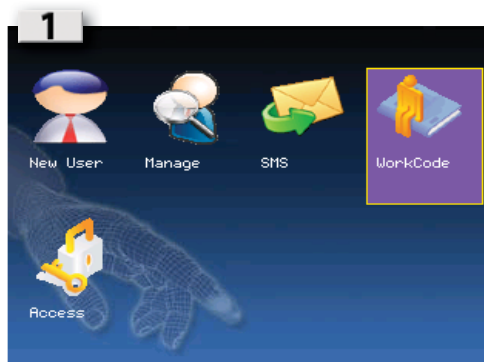


- Press **OK** on USR MNG
- Press **▶** 3x times
- Press **OK** on WORKCODE

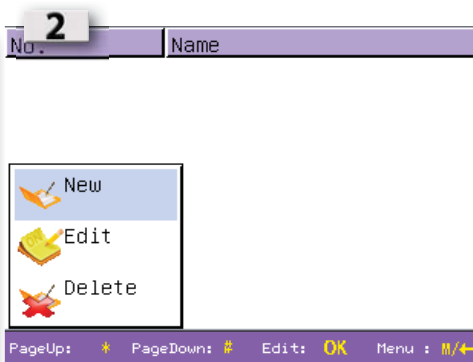


- Press **M/↵** for options window
- Select NEW to create workcode

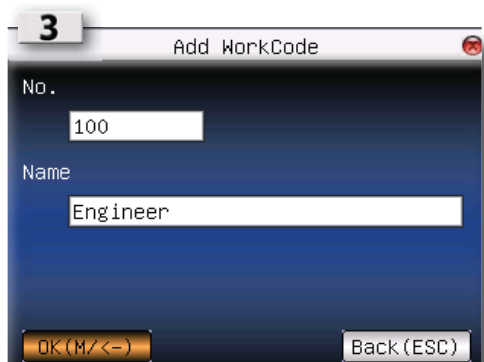

- Complete the fields

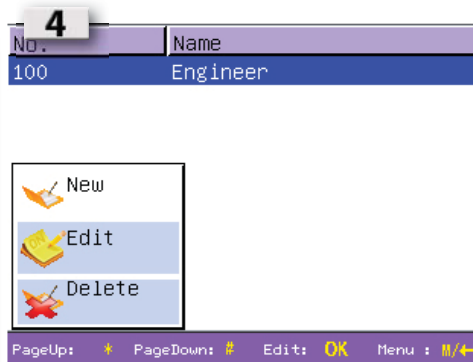

- EDIT / DELETE available for changes

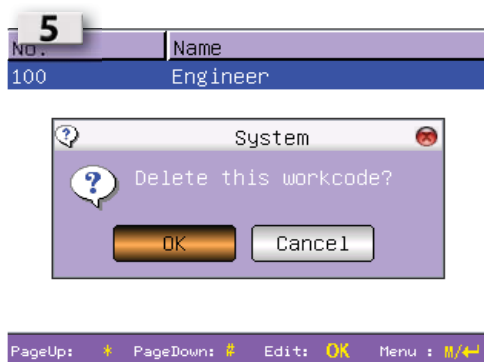

- If you wish to delete confirm with **OK**

**NOTE :**  
It is recommended to define work codes from the software rather than from the hardware because the process is easier.


## Summary

\*Create / Edit workcodes

## 4. Communications

### 4.1 Network (TCP/IP)

### Summary

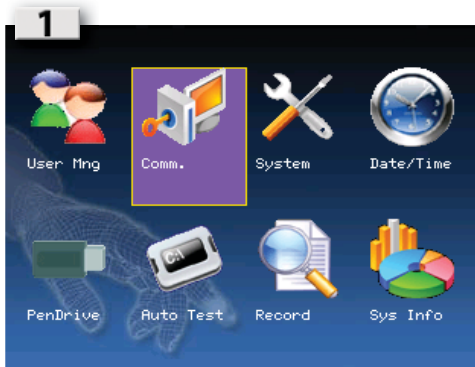

- Press **M** once
- Press **▶** once
- Press **OK**



- Press **OK** on NETWORK



- Press **▼** to desired field, and complete the values

### 4.2 RS232 / 485



- Press **▶** once to select RS232/485
- Press **OK**



- Press **▼** to select field
- Press **◀ ▶** to change values


\* Ensure to assign a static address, units will not work on DHCP

\* Recommended distance  
 \*\* RS232 = 20m - 60m  
 \*\*\* Could be affected by distance and power cables running parallel with unit cable  
 \*\* RS485 = 1000m (max)  
 \*\*\* Could be affected by power cables

## 4.3 Security



- Press **▶** 2x times to select SECURITY
- Press **OK**

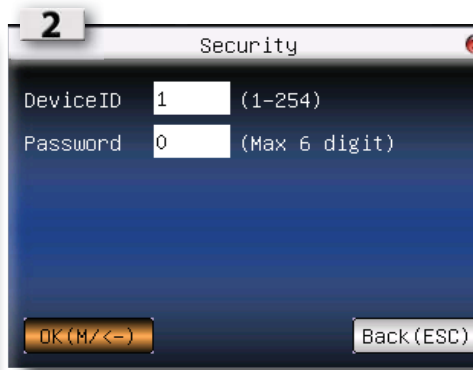

- Press **▼** to change values


## Summary

- \* Device related password
- \* Restrict sub-administrator access


## 4.4 Wiegand



- Press **▶** 3x times to select WIEGAND
- Press **OK**

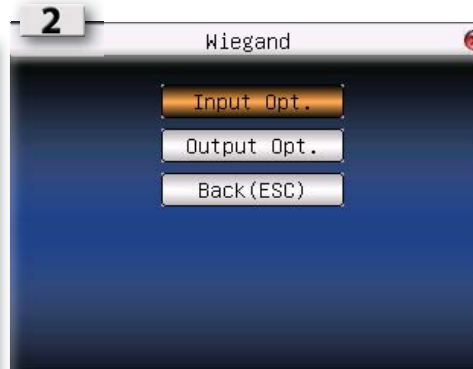

- Select INPUT OPT

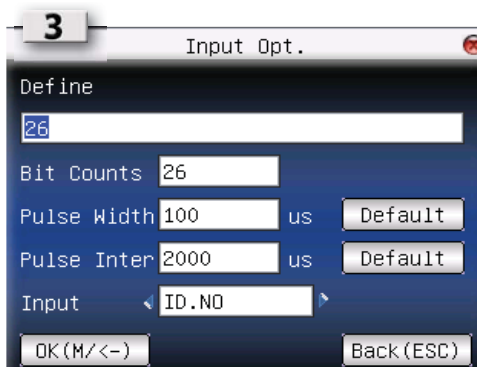


- Press **▼** to desired field and enter values
- Press **OK** to save

- \* Use WIEGAND communication port to connect to maglock or turnstiles



- Select OUTPUT OPT.

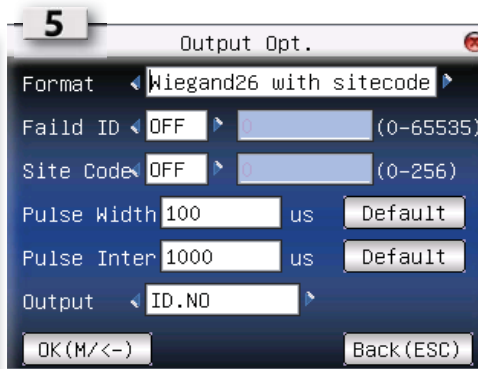


- Press to select fields
- Press to change values or enter values

## 4.5 Web Setup



- Press to select WEB SETUP

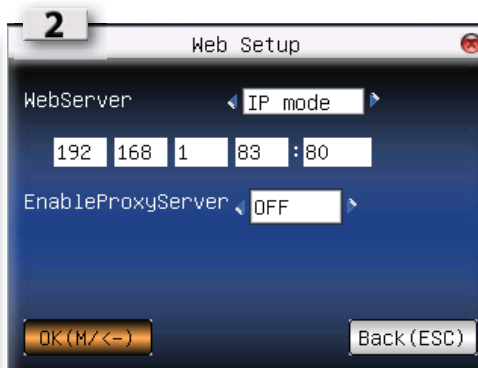


- Press to select fields to change values




- Fill in the fields as requested

## 5. System


### 5.1 System settings

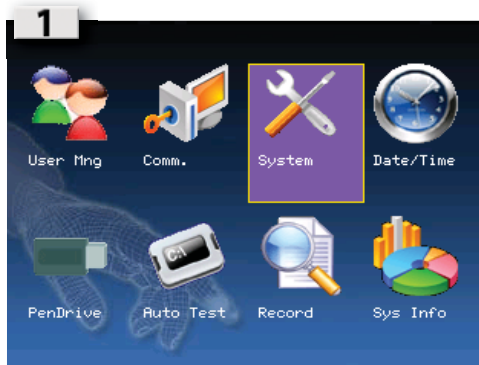

- Press **M/** once
- Press **▶** 2x times to select SYSTEM

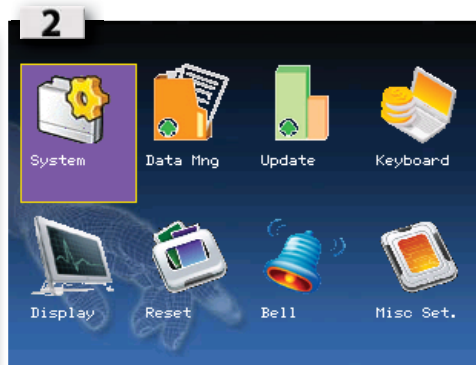

- Press **OK** to enter SYSTEM SETTINGS

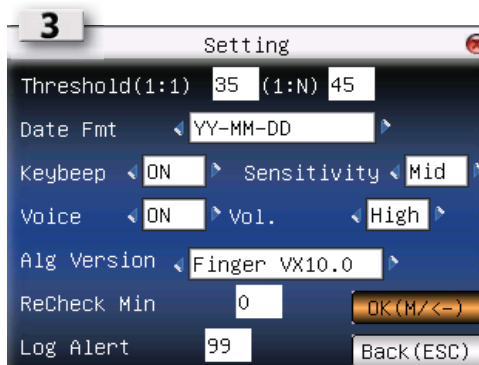

- Press **▼** to scroll down to fields
- Change values

### 5.2 Data Management



- Press **▶** to select DATA MNG




- Press **OK** on a delete function
- Press **OK** to confirm

## Summary



- Press **▼** to select desired option
- Press **OK** to confirm

## 5.2.1 System Update

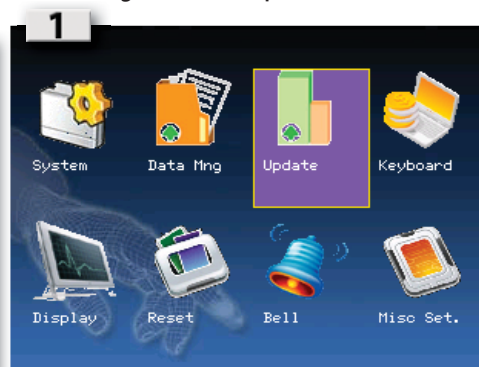


- Insert PENDRIVE(USB) with latest firmware on, before accessing this function

## Summary

\* System update - ensure to have latest firmware loaded on USB before this function will activate

## 5.3 Keyboard

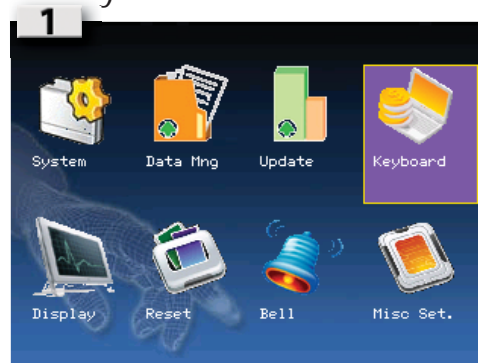

- Press **▶** 3x times to select KEYBOARD
- Press **OK**


Key	Function	No.	Name
F1	Status Key	0	Check-In
F2	Status Key	1	CheckOut
F3	Status Key	2	BreakOut
F4	Status Key	3	Break-In
F5	Status Key	4	OT-IN
F6	Status Key	5	OT-OUT
F7	Undefined		
F8	Undefined		

PageUp: **↑** PageDown: **↓** Edit: **OK**


- Press **OK** to edit selected field

\* Custom "F" keys to differentiate between access modes

## 5.4 Display

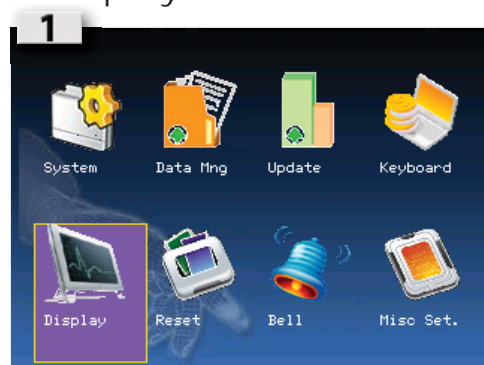


- Press **▼** to select DISPLAY
- Press **OK**

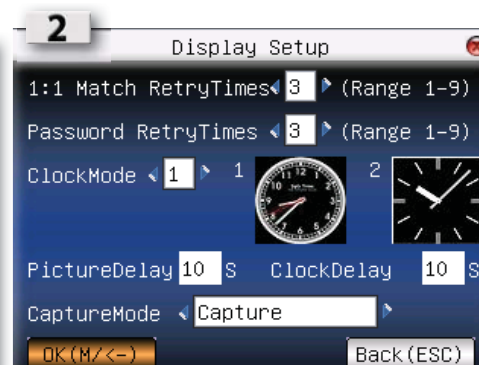

- Press **▼** to select field
- Press **◀ ▶** to change values
- Press **OK** to save

## 5.5 System Reset

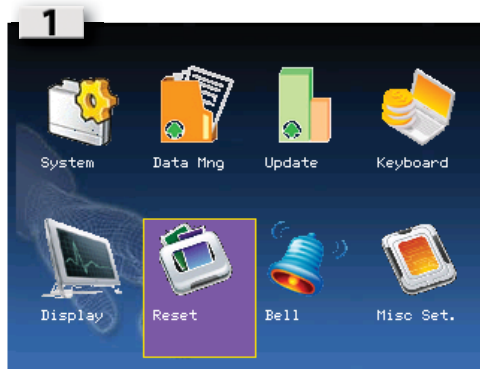

- Press **▶** to select RESET
- Press **OK**




- Select field that needed to be reset
- Press **OK** to confirm


## Summary

\* Reset function are only configuration of unit, and not to delete users


## 5.6 Bell

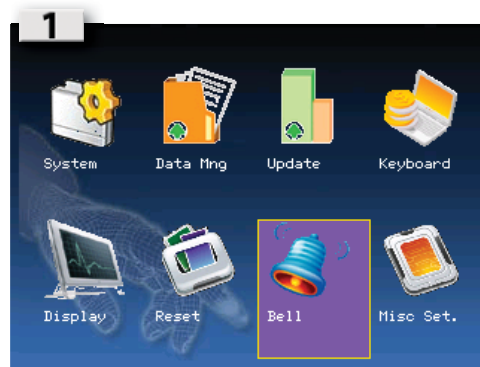


- Press **▶** 2x times to select BELL
- Press **OK**

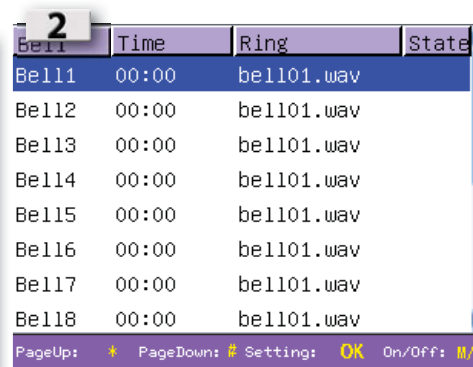

- Press **OK** to edit the field

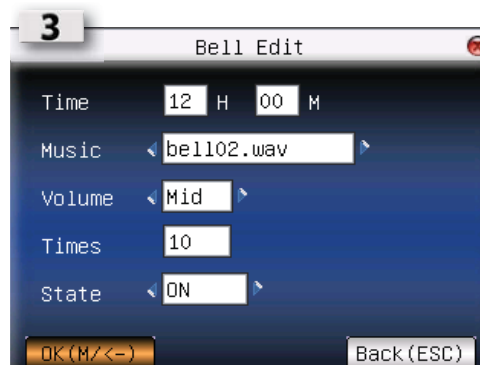

- Press **◀ ▶** to change values or enter values
- Press **OK** to save

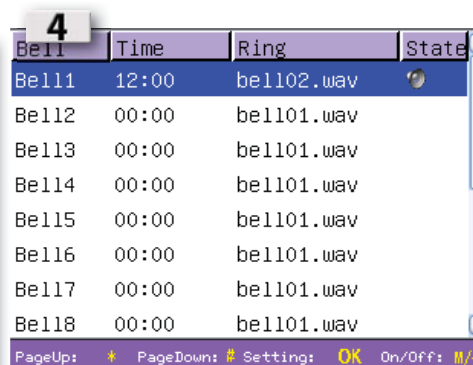

- Display will indicate change with a BELL in the STATE field

\* Notification bell for time breaks (lunch / tea / etc)

## 5.7 Miscellaneous settings



- Press **▶** 3x times to select MISC SET
- Press **OK**




- Press **◀ ▶** to change the value of the desired field or enter text


## Summary

\* Ensure device settings are correct when installing the device

## 5.8 Pendrive (USB)

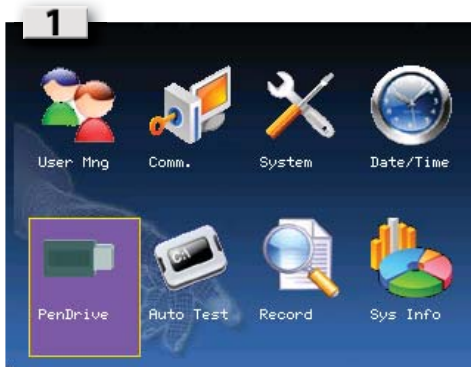

- Select PENDRIVE on the MAIN MENU

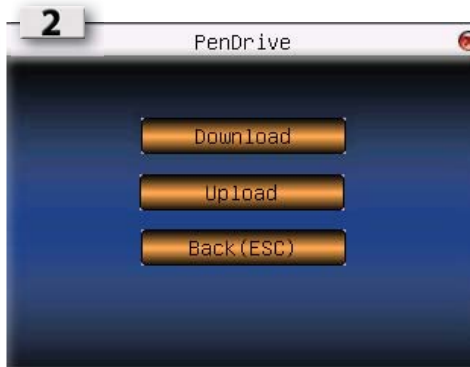

- Insert a PENDRIVE (USB) and select desired option

\* Pendrive / USB can be used to upload and download user ID's

## 5.9 Auto Test




- Select AUTO TEST on the MAIN MENU



- Select the desired field for testing

\* Ensure to run a AUTOTEST to test all functions on unit

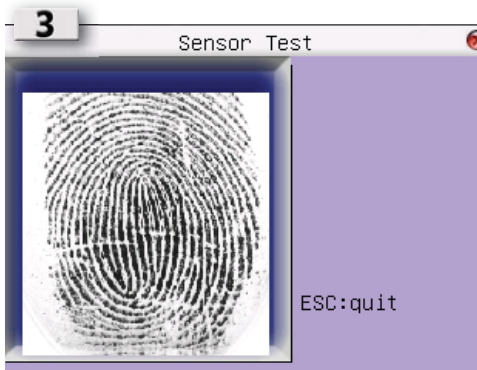


- Ensure to see the image of you finger print (see image left). This indicates that the sensor is in working condition.

- Press **▼** to select sensor test
- Test accordingly (see note on right hand side)
- Press **OK** to save

## 5.10 Record



- Select RECORD on the MAIN MENU

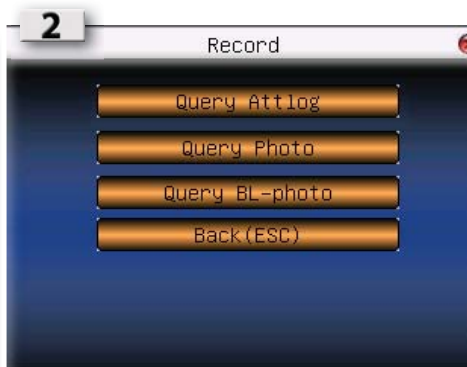


- Select option to run desired query on


## 5.11 System Information



- Select SYS INFO on the MAIN MENU

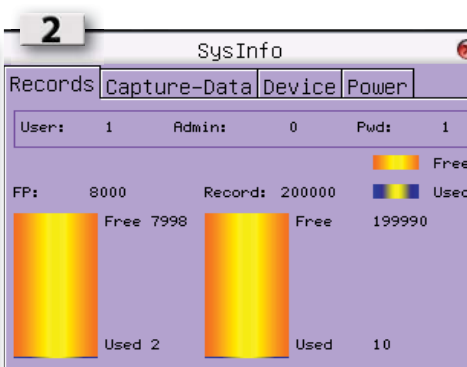

- Press **▶** to select desired info page
- RECORD screen

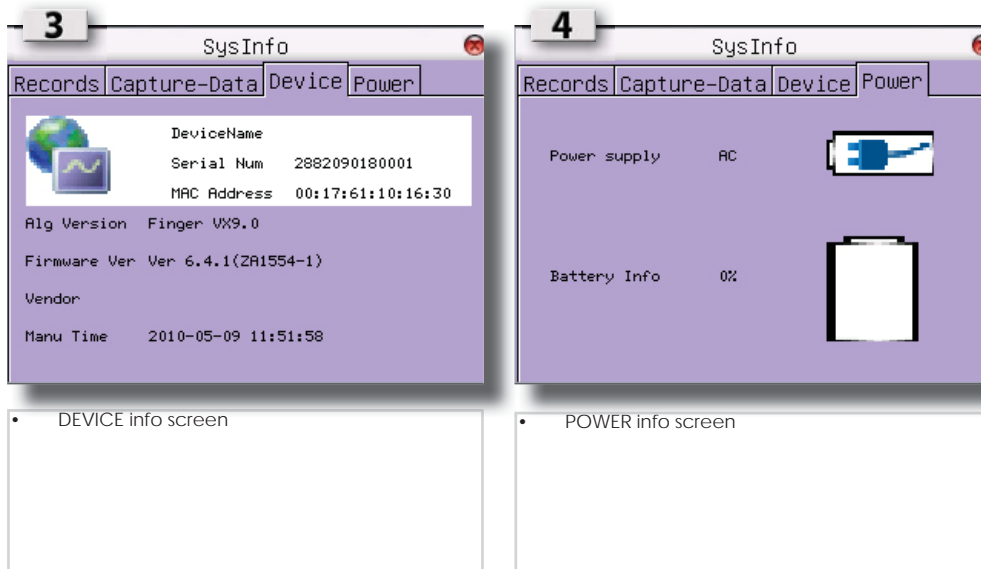

### 5.11.1 Number of Password Users Available in the Terminal (Password User)

Users can do verification using PIN password and a combination of fingerprint and password. To find out how many users are using password:

- Press Menu > Sys Info > Password User > View the number

### 5.11.2 Number of Time Scanners Have Been Used for Verification (S Logs)

S logs stands for scanner logs, which means the number of times the scanner has been used for verification, regardless of whether it is successful or not. To view the scanner logs:

- Press Menu > Sys Info > Record > Amount of transactions USED / FREE

### 5.11.3 Free Space Information (Free Space)

Find out the information about availability of space in your terminal through this function.

- Press Menu > Sys Info > Free Space > Free = number available

### 5.11.4 Device Information (Dev Info)

Find out the information about your terminal through this function. Press Menu > Sys Info > Dev Info > View the info

Information available includes:


- **AttLog (10k):** Shows the number of attendance logs that can be stored in the terminal, for example for AttLog (10k) 12 means  $10,000 \times 12 = 120,000$
- **S Logs:** Shows the number of Scanner Logs available for the terminal.
- **Manufactured Time (Manu Time):** The date and time when the terminal was produced is displayed when you press Manu Time
- **Serial Number of the Terminal (Serial Num):** The Serial number is pasted on the back of the terminal but in case the sticker is damaged, this is where you can retrieve the serial number.
- **Manufacturer:** Get the name of the manufacturer of the terminal here.
- **Device Name:** All models have different names. If you don't know the name of the terminal that you are having, get it here.
- **Algorithm Version:** This is where you can find terminal's algorithm version.

- Firmware Version:** Support sometimes require a firmware version to resolve some support issues. The version and date of the version is released is provided here. **For example:** Ver 6.20 Aug 19 2009
- View MAC:** This feature is a security feature of the products. Linking Software to the terminal requires the correct MAC address. Without availability of MAC address, the software will not be activated correctly. All products are supplied with the correct MAC address to ease communication. This is also to hinder people from using the software with a different hardware brand. An example of a MAC address is 00:0A:5D F1 BE 57.
- Press Menu > Sys Info > Dev Info > View MAC


## 6 Data Collection

### 6.1 Assign DATA COLLECT Shortcut Key

Switch off the device before connecting the USB Scanner. After connection, you can switch on the device again. You need to assign a Shortcut Key on the main Menu for Data Collection

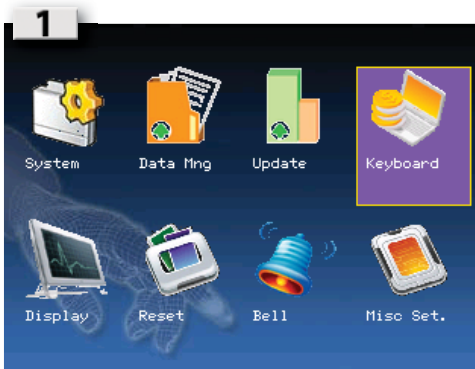


- Select SYS INFO on the MAIN MENU
- Select Keyboard to assign a shortcut key for data collection.

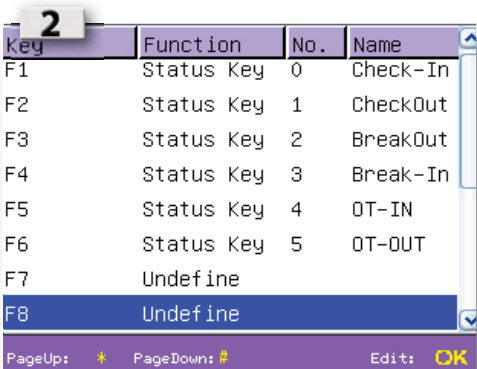

- Press **▼** to select desired Function Key to assign
- Press **OK** to edit the values



- Press **▶** to select DATA COLLECT
- Press **OK** to SAVE option

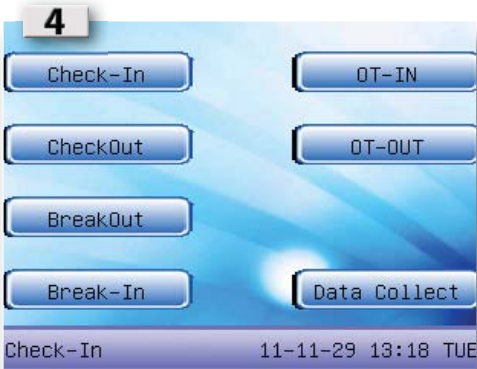

- After you selection, the screen will display as follows.

## Summary

\* Ensure device is switched off when connecting scanner


\* Assign a shortcut key

## 6.2 Assign Level Fields

These are the levels of which the scanner will scan the fields, for data records. Assign your levels as required.



- Select USER MANAGEMENT on the MAIN MENU
- Press **[F8]** to select the LEVEL function

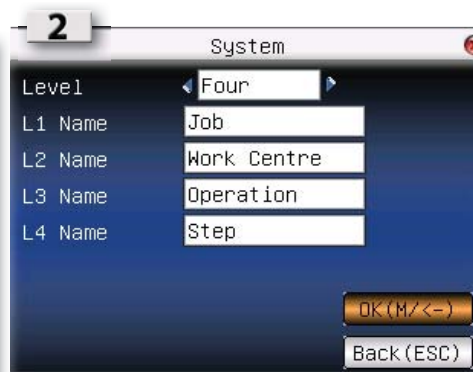

- Press **[F8]** **[F9]** to select desired field to assign
- Press **[OK]** to save the values

## 6.3 Main Menu (Data Collect)

After successful assigning of Shortcut Key and Levels, you main menu will change and shall have the "DATA COLLECT" option on the screen.




- The image on the left indicates F8 to be assigned, but you can assign any of the function keys as desired.

## 6.4 System Information (Data Collect)

Transactions of every scan will be recorded and can be retrieved from the following menus.



- Select SYS INFO on the MAIN MENU

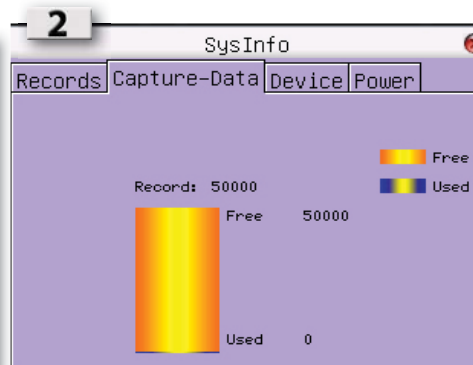

- Press **[F8]** to select desired info page
- RECORD screen

## Summary


\* Levels can be different, and depends on the stock that need to be scanned.

## 6.5 Delete Scanned Transactions(Data Collect)

Transactions can be deleted. Use the following menus on how to delete the transactions (data).

## Summary

\* Ensure to backup and delete old records

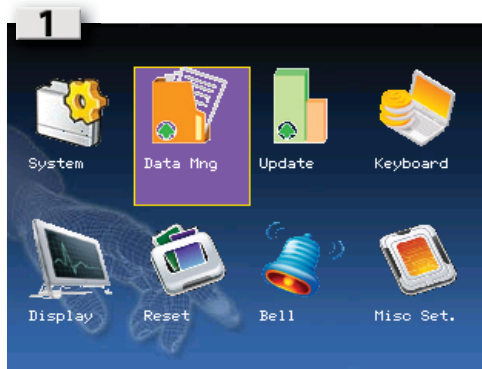

- Select SETTINGS on the MAIN MENU
- Select DATA MNG on the SUB MENU



- Press **▼** to select desired Function
- Press **OK** to edit the values



- Press **OK** to execute the delete



- After confirmation - message will display

# Appendix A:

## iClock990 Pinout

